

# Mounting plate

for

## Smoothie 75 / it-Switch 75 / Simplyworks 75

Manual  
English v. 1

Mountingplate is used when a fixed switch position is needed. After the switch is mounted on the plate, the plate can be attached to other objects with screws. Switch not included.

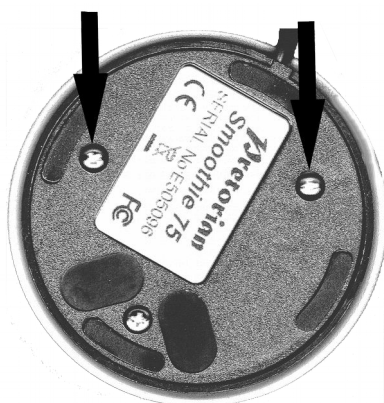


Fig 1

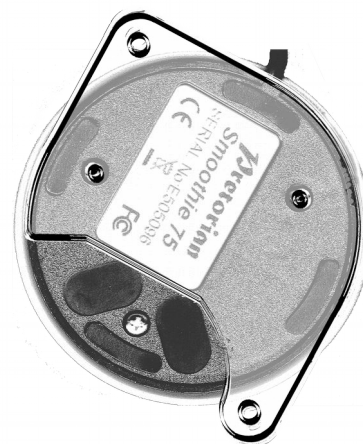


Fig 2

### -Content:

Mounting plate  
2 x M2,5 screws.  
2 x screws wood  
2 x M4 machine screws  
2 x washers  
2 x M4 nuts  
Manual

### -Assembly

- 1 Remove the 2 screws on the switch marked with arrows in fig. 1 with a small Phillips screwdriver .  
Store the screws in a safe place. (The original screws must be refitted if the switch is to be used later without the mounting plate.)
- 2 Place the mounting plate on the switch as shown in fig. 2.
- 3 Fit the two longer screws (M2,5) in the mounting plate and the switch, and tighten them with a small Phillips screwdriver.
- 4 Use the machine- or wood-screws to attach the mounting plate to the preferred location.

**Note!** Do not use alcohol or others solvents to clean the mounting plate.  
Use soap and water.

